

Engine Oil ► **Changing Engine Oil & Filter**

8. Apply a thin coat of engine oil to the rubber seal of a new oil filter.
9. Install a new oil filter and tighten.
Torque: 19 lbf·ft (26 N·m, 2.7 kgf·m).
10. Install the new sealing washer onto the drain bolt. Tighten the drain bolt.
Torque: 22 lbf·ft (30 N·m, 3.1 kgf·m).

11. Fill the crankcase with the recommended oil (► P. 42) and install the oil fill cap.

Required oil**When changing oil & engine oil filter:**

3.0 US qt (2.8 liters)

When changing oil only:

2.9 US qt (2.7 liters)

12. Check the oil level. ► P. 55
13. Check that there are no oil leaks.
14. Install the right lower fairing.