

5. Inspect the sprockets. ➤ P. 43
6. Clean and lubricate the drive chain.
➤ P. 44

Adjusting the Drive Chain Slack

Adjusting the chain requires special tools. Have the drive chain slack adjusted by your dealer.

(ABS type only)

When adjusting the drive chain slack, be careful not to damage the wheel speed sensor and pulser ring.

1. Place your motorcycle on the side stand on a level surface.
2. Place the transmission in Neutral. Stop the engine.
3. Loosen the rear axle nut.
4. Loosen the lock nuts on both adjusting bolts.

