


← Left turn signal indicator

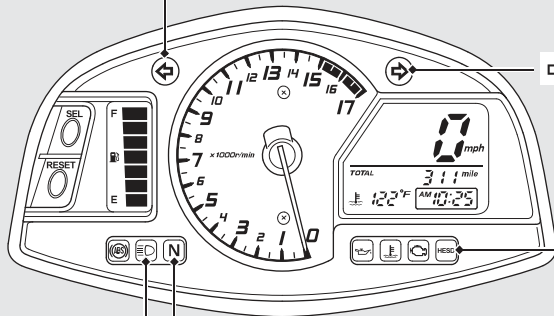


⇒ Right turn signal indicator

☰ High beam indicator

N Neutral indicator

Comes on when the transmission is in Neutral.

HESD HESD (Honda Electronic Steering Damper) indicator

Comes on briefly when the ignition switch is turned on with the engine stop switch in the RUN  position.

If it comes on while engine is running: (P83)