


Blown Fuse


Before handling fuses, see "Inspecting and Replacing Fuses." 2 P. 41

Fuse Box Fuses

CBR600RR

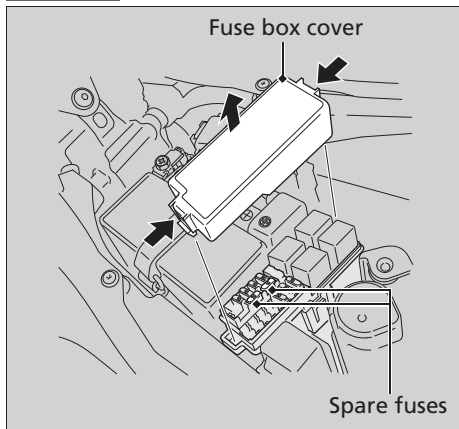

CBR600RA

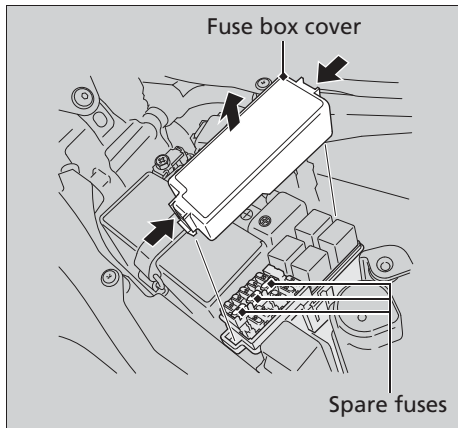

1. Remove the front seat. 2 P. 51
2. Remove the fuse box cover.