

## ■ Removal

1. Remove the bolts A, bolt B, bolt C, bolt D, collar and clips. ► P. 51
2. Remove the right lower cowl.

## ■ Installation

Install the parts in the reverse order of removal.