

## Equipment

|                     |         |
|---------------------|---------|
| Owner's Manual..... | 39, 105 |
| Tool Kit.....       | 38      |

## F

|                             |    |
|-----------------------------|----|
| <b>Flooded Engine</b> ..... | 35 |
|-----------------------------|----|

## Fuel

|                         |    |
|-------------------------|----|
| Consumption Meter ..... | 20 |
| Gauge .....             | 19 |
| Mileage Meter .....     | 20 |
| Recommended .....       | 37 |
| Remaining.....          | 19 |
| Tank Capacity .....     | 37 |

|                    |         |
|--------------------|---------|
| <b>Fuses</b> ..... | 51, 101 |
|--------------------|---------|

## G

|                      |     |
|----------------------|-----|
| <b>Gasohol</b> ..... | 119 |
|----------------------|-----|

|                       |    |
|-----------------------|----|
| <b>Gasoline</b> ..... | 37 |
|-----------------------|----|

## H

|                            |    |
|----------------------------|----|
| <b>Hazard Switch</b> ..... | 32 |
|----------------------------|----|

|                            |    |
|----------------------------|----|
| <b>Headlight Aim</b> ..... | 80 |
|----------------------------|----|

|                                      |    |
|--------------------------------------|----|
| <b>Headlight Dimmer Switch</b> ..... | 32 |
|--------------------------------------|----|

|                            |    |
|----------------------------|----|
| <b>Helmet Holder</b> ..... | 38 |
|----------------------------|----|

|                                  |    |
|----------------------------------|----|
| <b>High Beam Indicator</b> ..... | 30 |
|----------------------------------|----|

|   |        |
|---|--------|
| <b>High Coolant Temperature Indicator</b> ... | 30, 85 |
|---|--------|

|                             |     |
|-----------------------------|-----|
| <b>Honda Contacts</b> ..... | 123 |
|-----------------------------|-----|

|                          |    |
|--------------------------|----|
| <b>Horn Button</b> ..... | 32 |
|--------------------------|----|

## I

### Ignition Cut-off System

|                     |     |
|---------------------|-----|
| Banking Sensor..... | 105 |
|---------------------|-----|

|                 |    |
|-----------------|----|
| Side Stand..... | 71 |
|-----------------|----|

|                           |     |
|---------------------------|-----|
| <b>Ignition Key</b> ..... | 104 |
|---------------------------|-----|

|                              |             |
|------------------------------|-------------|
| <b>Ignition Switch</b> ..... | 33, 35, 105 |
|------------------------------|-------------|

|                         |    |
|-------------------------|----|
| <b>Indicators</b> ..... | 30 |
|-------------------------|----|

|                                 |     |
|---------------------------------|-----|
| <b>Information Record</b> ..... | 129 |
|---------------------------------|-----|

|                          |    |
|--------------------------|----|
| <b>Instruments</b> ..... | 18 |
|--------------------------|----|

### Instruments, Controls, & Other

|                |     |
|----------------|-----|
| Features ..... | 105 |
|----------------|-----|

## L

|                     |   |
|---------------------|---|
| <b>Labels</b> ..... | 7 |
|---------------------|---|

|                          |    |
|--------------------------|----|
| <b>Load Limits</b> ..... | 15 |
|--------------------------|----|

|                                 |    |
|---------------------------------|----|
| <b>Loading Guidelines</b> ..... | 15 |
|---------------------------------|----|

|   |        |
|---|--------|
| <b>Low Oil Pressure Indicator</b> ..... | 30, 86 |
|---|--------|