








# Maintenance Schedule

## Maintenance

Items	Pre-ride Check P. 37	Frequency *1											Annual Check	Regular Replace	Refer to page		
		x 1,000 km	1	6	12	18	24	30	36								
		x 1,000 mi	0.6	4	8	12	16	20	24								
Fuel Line 			I	I	I	I	I	I	I	I	I	I	I			-	
Fuel Level	I																-
Throttle Operation 	I		I	I	I	I	I	I	I	I	I	I	I			68	
Air Cleaner *2 					R								R			47	
Crankcase Breather *3			C	C	C	C	C	C	C	C	C	C	C			69	
Spark Plug			I	R	I	R	I	R	I	R	I	R	R			51	
Valve Clearance 			I	I	I	I	I	I	I	I	I	I	I			-	
Engine Oil	I		R	R	R	R	R	R	R	R	R	R	R			56	
Engine Oil Strainer Screen 				C									C			-	
Engine Oil Centrifugal Filter 				C									C			-	
Engine Idle Speed 		I	I	I	I	I	I	I	I	I	I	I	I			-	
Drive Chain	I															64	

### Maintenance Level

 : Intermediate. We recommend service by your dealer, unless you have the necessary tools and are mechanically skilled.

 : Technical. In the interest of safety, have your vehicle serviced by your dealer.

### Maintenance Legend

**I** : Inspect (clean, adjust, lubricate, or replace, if necessary)

**C** : Clean

**L** : Lubricate

**R** : Replace