


## Battery

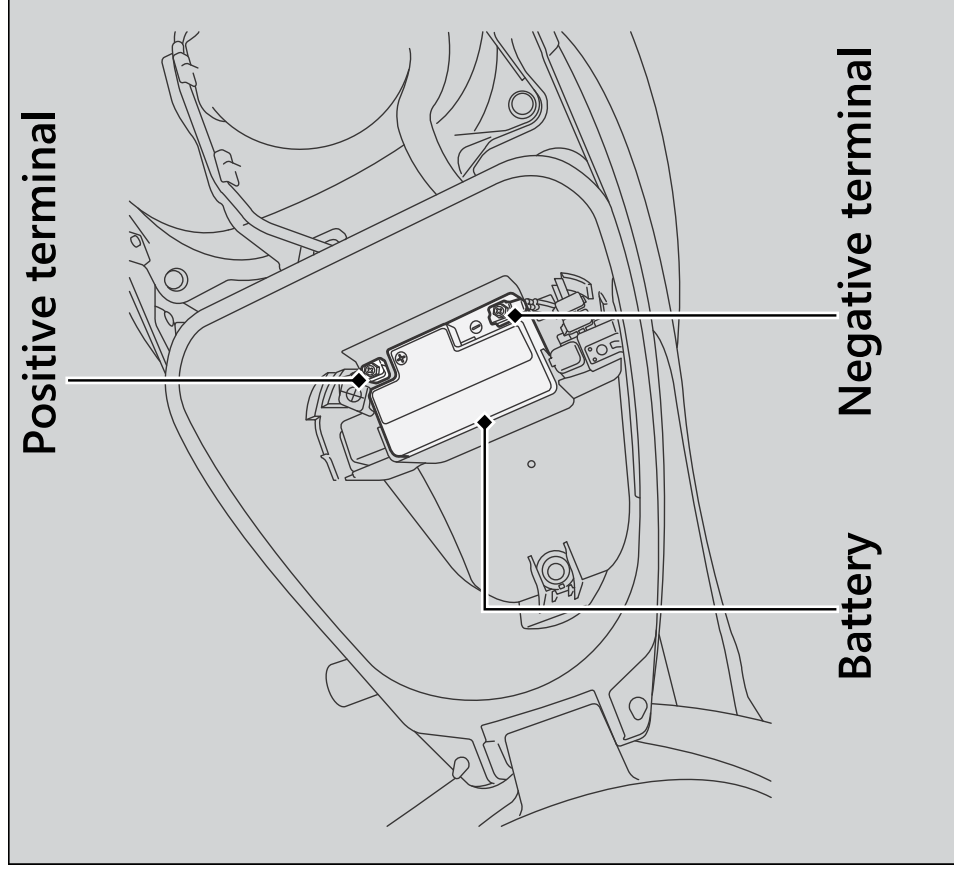

### ■ Removal

Make sure the ignition switch is in the OFF position.

1. Open the seat. ➔ P. 30
2. Remove the battery cover. ➔ P. 50
3. Disconnect the negative  $\ominus$  terminal from the battery.
4. Disconnect the positive  $\oplus$  terminal from the battery.
5. Remove the battery taking care not to drop the terminal nuts.

### ■ Installation

Install the parts in the reverse order of removal. Always connect the positive  $\oplus$  terminal first. Make sure that bolts and nuts are tight.

For proper handling of the battery, see "Maintenance Fundamentals." ➔ P. 38  
"Battery Goes Dead." ➔ P. 82