

Air Cleaner ▶ Changing Air Cleaner Element

5. Remove the air cleaner element by releasing the slots from the tabs.
6. Thoroughly clean the inside of the air cleaner housing.
7. Install the new air cleaner element.
 - ▶ Insert the air cleaner element at an angle as shown in the illustration (①).
8. Secure the air cleaner element by hooking its slots with the tabs on the air cleaner housing (②).
 - ▶ Make sure the air cleaner element is installed securely.
9. Install the parts in the reverse order of removal.

