

Troubleshooting

Engine Will Not Start	P. 93
Overheating (High coolant temperature indicator is on)	P. 94
Warning Indicators On or Flashing	P. 95
PGM-FI (Programmed Fuel Injection)	
Malfunction Indicator Lamp (MIL).....	P. 95
ABS (Anti-lock Brake System) Indicator	P. 95
Other Warning Indications	P. 96
Fuel Gauge Failure Indication.....	P. 96
Tire Puncture	P. 97
Electrical Trouble	P. 104
Battery Goes Dead.....	P. 104
Burned-out Light Bulb	P. 104
Blown Fuse.....	P. 107

Unstable Engine Operation Occurs Intermittently	P. 110
--	--------