

### Starter Motor Operates But Engine Does Not Start

---


Check the following items:

- Check the correct engine starting sequence. ➔ P. 33
- Check that there is gasoline in the fuel tank.
- Check if the PGM-FI malfunction indicator lamp (MIL) is on.
  - ▶ If the indicator lamp is on, contact your dealer as soon as possible.

### Starter Motor Does Not Operate

---

Check the following items:

- Check the correct engine starting sequence. ➔ P. 33
- Make sure engine stop switch is in the (Run) position.  ➔ P. 30
- Check for a blown fuse. ➔ P. 107
- Check for a loose battery connection (➔ P. 61) or battery terminal corrosion (➔ P. 50).
- Check the condition of the battery.
  - ➔ P. 104

If the problem continues, have your motorcycle inspected by your dealer.