



I Headlight Bulb

1. Remove the bolts from the headlight case.
2. Release the headlight case from the hook on the headlight holder, and pull up the headlight case.

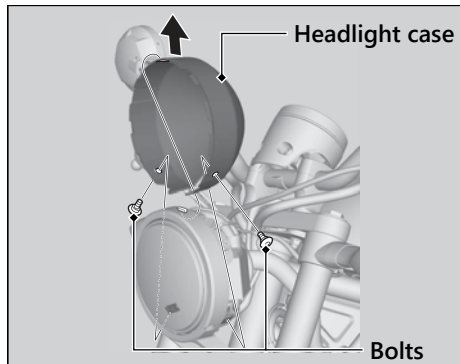

3. Disconnect the connector.
4. Remove the dust cover.

5. Unhook the pin and remove the bulb.

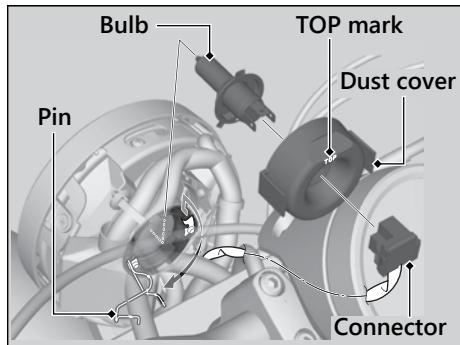

6. Install a new bulb and the parts in the reverse order of removal.
 - Install the dust cover with its TOP mark facing up.

Do not touch the glass surface with your fingers. If you touch the bulb with your bare hands, clean it with a cloth moistened with isopropyl (rubbing) alcohol.