


Starter Motor Operates But Engine Does Not Start

Check the following items:

- Check the correct engine starting sequence. ➔ P. 35
- Check that there is gasoline in the fuel tank.
- Check if the PGM-FI malfunction indicator lamp (MIL) is on.
 - ▶ If the indicator lamp is on, contact your dealer as soon as possible.

Starter Motor Does Not Operate

Check the following items:

- Check the correct engine starting sequence. ➔ P. 35
- Make sure engine stop switch is in the (Run) position.  ➔ P. 32
- Check for a blown fuse. ➔ P. 108
- Check for a loose battery connection (➔ P. 64) or battery terminal corrosion (➔ P. 52).
- Check the condition of the battery.
 - ➔ P. 105

If the problem continues, have your motorcycle inspected by your dealer.