


## Instruments (Continued)

### To reset the tripmeter [TRIP A/B] and average fuel mileage [AVG A/B]

To reset the tripmeter A and average fuel mileage A together, press and hold the SET button while the tripmeter A or average fuel mileage A is displayed.

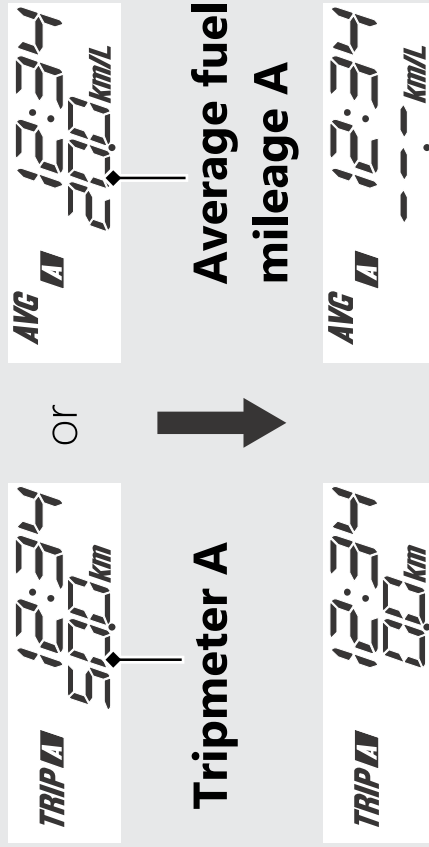

To reset the tripmeter B and average fuel mileage B together, press and hold the SET button while the tripmeter B or average fuel mileage B is displayed.

