


Emergency Stop Signal

Emergency stop signal activates when the system detects hard braking about 56 km/h (34 mph) or above to alert drivers behind you about sudden braking by rapidly flashing both turn signal lights. This may help to alert drivers behind you to take appropriate means to avoid a possible collision with your vehicle.


The emergency stop signal stops operating when:

- You release the brakes.
- The ABS is deactivated.
- Your vehicle's decelerating speed becomes moderate.

When the system activates:

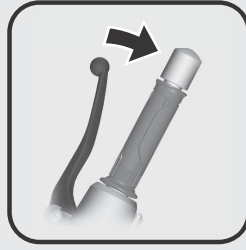

1 Hard braking

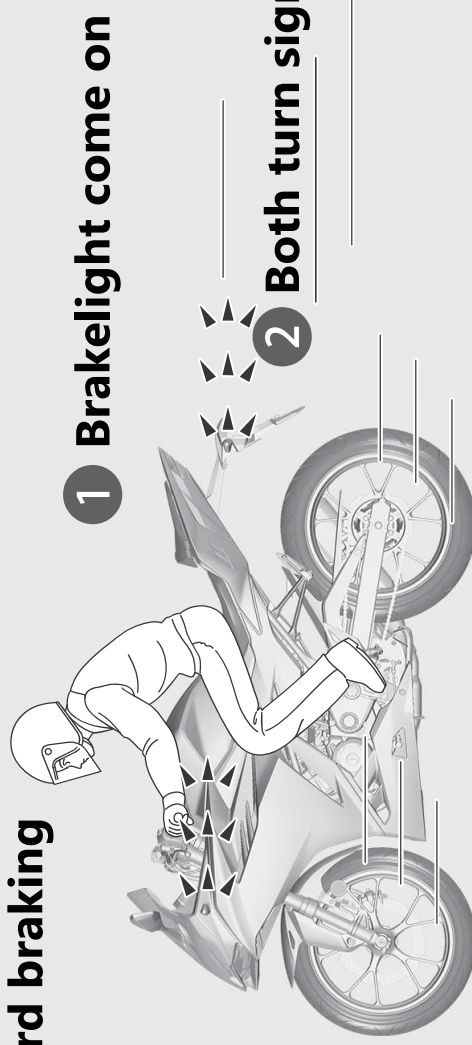

2 Both turn signal indicators blink