








Maintenance Schedule

Items	Pre-ride Check P. 38	Frequency *1										Annual Check	Regular Replace	Refer to page	
		x 1,000 km	1	6	12	18	24	30	36						
		x 1,000 mi	0.6	4	8	12	16	20	24						
Fuel Line 			I	I	I	I	I	I	I	I	I	I			-
Fuel Level	I														31
Throttle Operation 	I		I	I	I	I	I	I	I	I	I	I			65
Air Cleaner *2 						R						R			
Crankcase Breather *3			C	C	C	C	C	C	C	C	C	C			
Spark Plug			I	R	I	I	R	I	I	R	I	R			
Valve Clearance 											I				
Engine Oil	I		R	R	R	R	R	R	R	R	R	R			53
Engine Oil Strainer Screen 				C			C			C		C			
Engine Idle Speed 		I	I	I	I	I	I	I	I	I	I	I			
Radiator Coolant *4	I													3 Years	55
Cooling System 															

Maintenance Level

 : Intermediate. We recommend service by your dealer, unless you have the necessary tools and are mechanically skilled.

 : Technical. In the interest of safety, have your vehicle serviced by your dealer.

Maintenance Legend

I : Inspect (clean, adjust, lubricate, or replace, if necessary)

C : Clean

L : Lubricate

R : Replace