

# Maintenance

Please read “Importance of Maintenance” and “Maintenance Fundamentals” carefully before attempting any maintenance. Refer to “Specifications” for service data.

An optional tool kit may be available. Check with your Honda dealer’s parts department.

<b>Importance of Maintenance</b> .....	P. 74	<b>Brakes</b> .....	P. 112
<b>Maintenance Schedule</b> .....	P. 76	<b>Side Stand</b> .....	P. 116
<b>Maintenance Fundamentals</b> .....	P. 79	<b>Drive Chain</b> .....	P. 117
<b>Removing &amp; Installing Body Components</b> ...	P. 95	<b>Wheels</b> .....	P. 121
Battery .....	P. 95	<b>Clutch</b> .....	P. 122
Battery Box Cover .....	P. 97	<b>Throttle</b> .....	P. 125
Front Seat .....	P. 98	<b>Crankcase Breather</b> .....	P. 126
Skid Plate .....	P. 100	<b>Other Adjustments</b> .....	P. 127
Tool Box .....	P. 101	Headlight Aim .....	P. 127
<b>Spark Arrester</b> .....	P. 102	Brake Lever .....	P. 128
<b>Engine Oil</b> .....	P. 104	Front Suspension .....	P. 129
<b>Coolant</b> .....	P. 110	Rear Suspension .....	P. 132