










Items			Frequency*1								Regular Replace	Refer to page	
			x 1,000 mi	0.6	4	8	12	16	20	24			
			x 1,000 km	1.0	6.4	12.8	19.2	25.6	32.0	38.4			
Emission-related Items	Fuel Line					I		I		I		-	
	Throttle Operation					I		I		I		125	
	Air Cleaner*2						R			R		94	
	Crankcase Breather*3				C	C	C	C	C	C		126	
	Spark Plug		Every 16,000 mi (25,600 km):					I	Every 32,000 mi (51,200 km):			R	-
	Valve Clearance								I				-
	Engine Oil			R		R		R		R	1 Year	104	
	Engine Oil Filter			R				R				106	
	Clutch Oil Filter*8			R				R				108	
	Engine Idle Speed					I		I		I		-	
	Radiator Coolant*7					I		I		I	3 Years	110	
	Cooling System					I		I		I		-	
	Secondary Air Supply System							I				-	
Evaporative Emission Control System*4							I				-		

Maintenance Level

-  : Intermediate. We recommend service by your dealer, unless you have the necessary tools and are mechanically skilled. Procedures are provided in an official Honda Service Manual (2 P. 178).
-  : Technical. In the interest of safety, have your motorcycle serviced by your dealer.

Maintenance Legend

- I** : Inspect (clean, adjust, lubricate, or replace, if necessary)
- R** : Replace
- L** : Lubricate
- C** : Clean