


Riding mode

You can change the riding mode.
The riding mode consists of the following parameters.

P: Engine output level

EB: Engine brake level

: Torque Control level

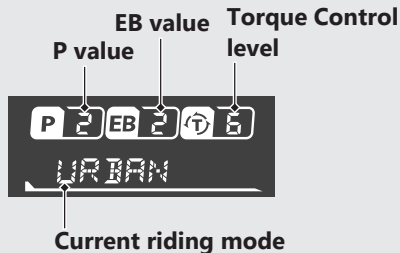

Riding mode has four modes.
Available riding mode: TOUR, URBAN, GRAVEL and USER.

TOUR, URBAN and GRAVEL

- u TOUR: Enables smooth acceleration even when riding with a passenger or a full load of luggage.
- u URBAN: Standard, all-round mode for a variety of situations.
- u GRAVEL: Good for stable riding on loose surfaces such as dirt roads.

Each value of initial setting can not be changed.

USER

Each value of initial setting can be changed.