

# Maintenance

Please read "Importance of Maintenance" and "Maintenance Fundamentals" carefully before attempting any maintenance. Refer to "Specifications" for service data.

An optional larger tool kit may be available.

Check with your Honda dealer's parts department.

<b>Importance of Maintenance</b> .....	P. 87	<b>Engine Oil</b> .....	P. 118
<b>Maintenance Schedule</b> .....	P. 89	<b>Coolant</b> .....	P. 124
<b>Maintenance Record</b> .....	P. 92	<b>Brakes</b> .....	P. 126
<b>Maintenance Fundamentals</b> .....	P. 93	<b>Side Stand</b> .....	P. 129
<b>Removing &amp; Installing Body</b>		<b>Drive Chain</b> .....	P. 130
<b>Components</b> .....	P. 108	<b>Wheels</b> .....	P. 135
Battery .....	P. 108	<b>Clutch</b> .....	P. 136
Battery Box Cover .....	P. 109	<b>Throttle</b> .....	P. 139
Clip .....	P. 110	<b>Crankcase Breather</b> .....	P. 140
Front Seat .....	P. 111	<b>Other Adjustments</b> .....	P. 141
Right Side Lid .....	P. 113	Adjusting the Headlight Aim .....	P. 141
Skid Plate .....	P. 114	Adjusting the Brake Lever .....	P. 142
Tool Box .....	P. 115	Adjusting the Front Suspension .....	P. 143
<b>Spark Arrester</b> .....	P. 116	Adjusting the Rear Suspension .....	P. 146