

Indicators (Continued)

Torque Control OFF indicator

- Comes on when the Torque Control is turned is turned off.

Torque Control indicator

- Comes on when the ignition switch is turned to the ON position. Goes off when your speed reaches approximately 6 mph (10 km/h) to indicate Torque Control is ready to work.
- Blinks when Torque Control is operating.

If it comes on while riding:  **P.140**

