










Maintenance Schedule

Items	Frequency*1								Regular Replace	Refer to page
	× 1,000 mi	0.6	4	8	12	16	20	24		
	× 1,000 km	1.0	6.4	12.8	19.2	25.6	32.0	38.4		
Fuel Line 				I		I		I		-
Throttle Operation 				I		I		I		138
Air Cleaner*2					R			R		106
Crankcase Breather*3			C	C	C	C	C	C		139
Spark Plug	Every 16,000 mi (25,600 km): I Every 32,000 mi (51,200 km): R									-
Valve Clearance 						I				-
Engine Oil		R		R		R		R	1 Year	119
Engine Oil Filter		R				R				119
Clutch Oil Filter*8		R				R				121
Engine Idle Speed 				I		I		I		-
Radiator Coolant*7				I		I		I	3 Years	123
Cooling System 				I		I		I		-
Secondary Air Supply System 						I				-
Evaporative Emission Control System*4 						I				-

Maintenance Level

-  : Intermediate. We recommend service by your dealer, unless you have the necessary tools and are mechanically skilled. Procedures are provided in an official Honda Service Manual (📖 P. 190).
-  : Technical. In the interest of safety, have your motorcycle serviced by your dealer.

Maintenance Legend

- I** : Inspect (clean, adjust, lubricate, or replace if necessary)
- L** : Lubricate
- R** : Replace
- C** : Clean