

## Instruments *(Continued)*

### Torque Control level [T] indicator P.129


When the indicator flashes, have your dealer check for problems.

### [EB] [Engine Brake] level indicator P.137

When the indicator flashes, have your dealer check for problems.

### [P] [Power] level indicator P.137

When the indicator flashes, have your dealer check for problems.

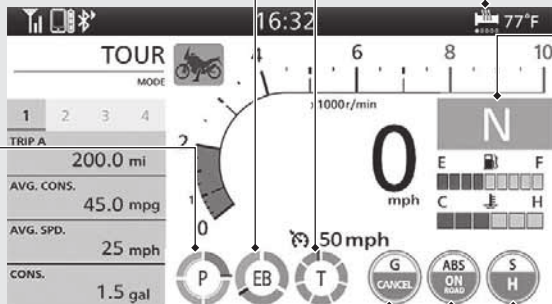

### G switch [G] indicator P.122 CRF1100D/D4

When the indicator flashes, have your dealer check for problems.

### ABS mode [ABS] indicator P.137

When the indicator flashes, have your dealer check for problems.

### [S] [Overall] indicator P.137 CRF1100A4/D4

When the indicator flashes, have your dealer check for problems.