

- 3 If you select to [OFF] (manual) push the ◀ or ▶ of the ◀▶ sel left/right switch to select your preferred level.
- u Push and hold the ◀ or ▶ of the ◀▶ sel left/right switch to advance the figure fast.



- 4 Return to the riding information, previous screen or Home screen. **P.38**
- You can also perform the above settings by using the touch screen.

**Setting range:** Level 1 to 8 or [Auto]

**Default:** [Auto]

## Background

You can select the background.

### Automatic Background Control:

**P.342**

