











Maintenance Schedule

Items		Frequency*1								Regular Replace	Refer to page
		× 1,000 mi	0.6	4	8	12	16	20	24		
		× 1,000 km	1.0	6.4	12.8	19.2	25.6	32.0	38.4		
Emission-Related Items	Fuel Line 				I		I		I		-
	Throttle Operation 				I		I		I		282
	Air Cleaner*2						R		R		246
	Crankcase Breather*3			C	C	C	C	C	C		283
	Spark Plug	Every 16,000 mi (25,600 km): I Every 32,000 mi (51,200 km): R									
	Valve Clearance 						I				-
	Engine Oil		R		R		R		R	1 Year	262
	Engine Oil Filter		R				R				262
	Clutch Oil Filter*8		R				R				264
	Engine Idle Speed 				I		I		I		-
	Radiator Coolant*7				I		I		I	3 Years	266
	Cooling System 				I		I		I		-
	Secondary Air Supply System 						I				-
	Evaporative Emission Control System*4 						I				-
Exhaust Gas Control Actuator Cable 						I				-	

Maintenance Level

-  : Intermediate. We recommend service by your dealer, unless you have the necessary tools and are mechanically skilled. Procedures are provided in an official Honda Service Manual (2 P. 356).
-  : Technical. In the interest of safety, have your vehicle serviced by your dealer.

Maintenance Legend

- I** : Inspect (clean, adjust, lubricate, or replace, if necessary)
- L** : Lubricate
- R** : Replace
- C** : Clean