


Front Seat

Removal

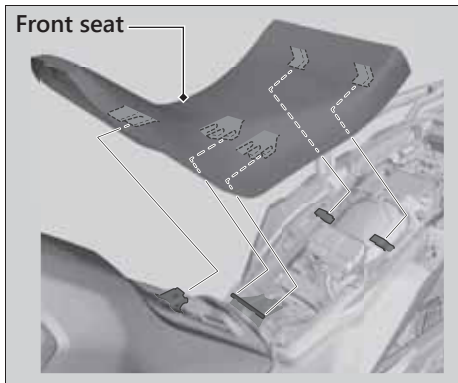

1. Remove the rear seat. 2 P. 253
2. Remove the front seat while pulling it backward and upward.

Installation

1. **When setting the high seat position:**
Insert the front lower prong and center lower prongs into the front stay and center stays on the fuel tank, and insert the rear hooks into the upper slots.

When setting the low seat position:
Insert the front upper prong and center upper prongs into the front stay and center stays on the fuel tank, and insert the rear hooks into the lower slots.