

Tire Puncture u Removing Wheels

4. On the right side, remove the mounting bolts and remove the brake caliper.
 - u Support the brake caliper assembly so that it doesn't hang from the brake hose. Do not twist the brake hose.
 - u Avoid getting grease, oil, or dirt on the disc or pad surfaces.
 - u Do not pull the brake lever while the brake caliper is removed.
 - u Take care to prevent the brake caliper from scratching the wheel during removal.

5. Remove the front axle nut.
6. Loosen the left axle pinch bolts.
7. Support your vehicle securely and raise the front wheel off the ground using a maintenance stand or a hoist.

