

Instruments (Continued)

Page 4:

Page 4 shows the setting values of the following items.

- ABS function on the rear wheel [ABS RR] display **↔P.58**
- Honda Selectable Torque Control level [HSTC] display **↔P.59**
- Wheelie Control level [W] display **↔P.60**
- **CRF1100A4/D4**
- Rear suspension preload level [PRELOAD] display **↔P.61**
- **CRF1100D/D4**
- G switch [G] display **↔P.62**

