

Instruments (Continued)

Display range: 14 °F (-10 °C) to 122 °F (50 °C)

- Below 13°F (-11°C): " --- " is displayed
- Above 122°F (50°C): 122°F (50°C) flashes

Road heat and exhaust from another vehicle can affect the temperature reading when your vehicle speed is less than 19 mph (30 km/h). It may take several minutes for the display to be updated after the temperature reading has stabilized.

Cruise Control Set Speed

The speed set for cruise control is displayed.



Cruise control set speed

To set the cruise control set speed:

▶ P.212