

# Wheelie Control

Wheelie Control level [W] can be selected or turned on/off.

- ▶ Do not change the wheelie control level [W] while riding.

Stop the vehicle first, then select the wheelie control level [W].

- ▶ In the following cases, the wheelie control [W] will be turned on and the specific wheelie control level [W] will automatically be set as below.

- Each time the ignition switch is turned to the ON position, the wheelie control level [W] will automatically be set to level it was set to before. However, if the level was set to 0 (off), it will automatically be set to level before turning off the wheelie control level [W].

- ▶ When the wheelie control [W] is turned from the [0] (off) position to the on position, it will automatically be set to the level before turning off the wheelie control [W].