



## To Set Cruise Control

- 1 Make sure the travelling speed and operating gear are conformed to the requirements of the system. Any speed other than the available range will not be memorised.
- 2 Press the  cruise control main switch. (The  cruise control main indicator will come on.)
- 3 Accelerate to the desired speed.
- 4 Push the **RES / +** **SET / -** cruise control lever to **SET / -** side. (The cruise control **SET** indicator will come on.) Your current travelling speed is memorised.

