

Servicing Your Honda

Service Preparations

Maintenance Component Locations	52
Tools	55
Left Side Cover Removal	56
Left Fuel Tank Shroud Removal	57
Right Fuel Tank Shroud Removal	58
Clip Removal	59

Service Procedures

Fluids & Filters

Fuel	60
Engine Oil.....	63
Air Cleaner	69
Crankcase Breather.....	72

Engine

Throttle	73
Clutch System.....	76
Valve Clearance.....	78
Engine Idle Speed.....	81
Spark Plug	82
Spark Arrester.....	84

Chassis

Suspension	87
Brakes.....	90
Wheels.....	96
Tires & Tubes.....	101
Side Stand	105
Drive Chain	106

Electrical

Battery	113
Appearance Care	118