

Servicing Your Honda

Service Preparations

Maintenance Component Locations	50
Tools	53
Left Side Cover Removal	54
Left Fuel Tank Shroud Removal	55
Right Side Cover Removal	56
Clip Removal	57

Service Procedures

Fluids & Filters

Fuel	58
Engine Oil	61
Air Cleaner	67
Crankcase Breather	70

Engine

Throttle	71
Clutch System	74
Valve Clearance	76
Spark Plug	79
Spark Arrester	81

Chassis

Suspension	84
Brakes	87
Wheels	93
Tires & Tubes	98
Side Stand	102
Drive Chain	103

Electrical

Battery	110
---------------	-----

Appearance Care	115
-----------------------	-----