


# Left Side Cover Removal

Refer to *Safety Precautions* on page 43.

LEFT SIDE

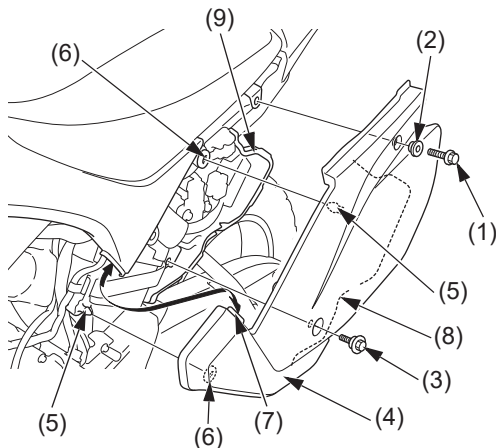

- |            |                |            |
|------------|----------------|------------|
| (1) bolt A | (4) side cover | (7) tab    |
| (2) collar | (5) prongs     | (8) rid    |
| (3) bolt B | (6) grommets   | (9) groove |

## Removal

1. Remove the bolt A (1), collar (2) and bolt B (3) securing side cover (4).
2. Pull the prongs (5) out of the rubber grommets (6).

## Installation

1. Attach the prongs (5) to the rubber grommets (6), aligning its tab (7) with rear lower edge of the left fuel tank shroud.
2. Align the rib (8) of the side cover with the groove (9) of the battery compartment. Press the side cover into position.
3. Install the bolt A, bolt B and collar, and tighten them.