

Quick Reference

These symbols are used in Operating Controls section:

| SYMBOL | COMPONENT | SEE PAGE |
|--------|---|----------|
| I | ON – ignition switch | 17 |
| ○ | OFF – ignition switch | 17 |
| Ⓜ | START button | 18 |
| Ⓜ | RUN – engine stop switch | 18 |
| Ⓜ | STOP – engine stop switch | 18 |
| Ⓜ | PGM-FI malfunction indicator lamp (MIL) | 20 |
| Ⓜ | fuel reserve indicator | 21 |
| Ⓜ | Ignition indicator | 21 |