

Maintenance Schedule

Items	Frequency	Whichever Comes First ⇒	Initial Maint.	Regular Maint. Interval				Refer to page:		
				mi	100	600	1,200		1,800	2,400
				km	150	1,000	2,000		3,000	4,000
Note	Month	1	6	12	18	24				
	Drive Chain	Note 1	I, L	I, L: every 300 mi (500 km) or 3 months				99		
	Drive Chain Slider			I	I	I	I	100		
	Brake Shoe Wear			I	I	I	I	87		
	Brake System		I	I	I	I	I	83		
	Clutch System		I	I	I	I	I	71		
	Side Stand				I		I	98		
*	Suspension				I		I	80		
*	Spark Arrester			C: every 1,000 mi (1,600 km) or every 100 operating hours				78		
*	Nuts, Bolts, Fasteners		I		I		I	—		
**	Wheels/Tires		I	I	I	I	I	89, 94		
**	Steering Head Bearings		I		I		I	—		

* Should be serviced by your dealer, unless the owner has the proper tools and service data and is mechanically qualified. Refer to the official Honda Service Manual (page 144).

** In the interest of safety, we recommend these items be serviced only by your dealer.