


Refer to *Safety Precautions* on page 45.


Front Brake Lever Freeplay

RIGHT SIDE

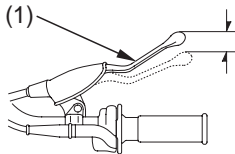

(1) front brake lever

RIGHT SIDE

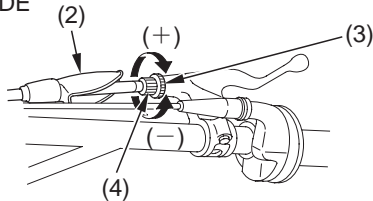

(2) rubber dust cover

(3) lock nut

(4) front brake cable adjuster

(+) increase freeplay

(-) decrease freeplay

Adjust the freeplay of the brake lever with the front wheel pointed straight ahead.

Inspection

Check freeplay by pulling in slowly on the front brake lever (1) until the brake starts to engage.

Freeplay: $13/16 - 1 \frac{3}{16}$ in (20 – 30 mm)

If necessary, adjust to the specified range.

Upper Adjustment

1. Pull the rubber dust cover (2) back.
2. Loosen the lock nut (3) and turn the front brake cable adjuster (4).
3. Tighten the lock nut. Return the dust cover to its normal position.
4. Apply the brake, release it, then spin the wheel and check that it rotates freely. Repeat this procedure several times.

(cont'd)