



## Adjustment

LEFT REAR

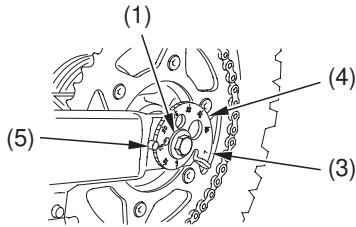

RIGHT REAR

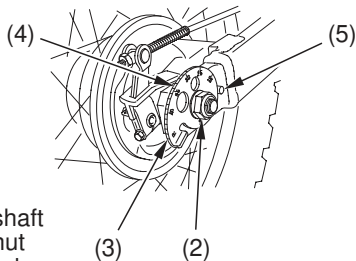

- (1) rear axle shaft
- (2) rear axle nut
- (3) chain adjusters
- (4) index marks
- (5) stopper pins

1. Hold the rear axle shaft (1) and loosen the rear axle nut (2).
2. Turn both the right and left chain adjusters (3) equally to increase or decrease chain slack.
3. After adjusting, be sure the same adjuster index marks (4) align with the stopper pins (5) on both sides of the swingarm.
4. Tighten the rear axle nut to the specified torque:  
**80 lbf·ft (108 N·m , 11.0 kgf·m)**
5. Recheck drive chain slack.
6. Check rear brake pedal freeplay and adjust as necessary ([page 90](#)). Freeplay is affected when repositioning the rear wheel to adjust drive chain slack.

If a torque wrench is not used for this installation, see your dealer as soon as possible to verify proper assembly.