
Engine Idle Speed

Refer to Safety Precautions on page 43.

Engine Idle Speed

RIGHT SIDE

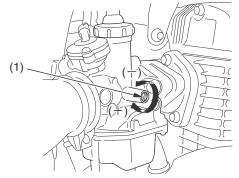

- (1) throttle stop screw
- (+) increase rpm
- (–) decrease rpm

The engine must be at normal operating temperature for accurate idle speed adjustment. Ten minutes of stop-and-go riding is sufficient.

Do not attempt to compensate for faults in other systems by adjusting idle speed. See your dealer for regularly scheduled carburetor adjustments.

- 1. Warm up the engine, shift to neutral and place the motorcycle on its stand.
- 2. Connect a tachometer, following the tachometer manufacturer's instructions.
- 3. Adjust idle speed with the throttle stop screw (1).

Idle Speed: $1,400 \pm 100 \text{ rpm}$