

# Starting & Stopping the Engine

---

## Flooded Engine

If the engine fails to start after repeated attempts, it may be flooded with excess fuel. To clear a flooded engine:

1. Open the throttle fully.
2. While pushing the engine stop button, press the start button for 5 seconds.
3. Release the engine stop button.
4. Follow the normal engine starting procedure (page 27).

## Bank Angle Sensor Ignition Cut-off System

Your motorcycle's banking (lean angle) sensor system is designed to automatically stop the engine and fuel pump if the motorcycle is overturned.

Before restarting the engine, you must turn the ignition switch to the OFF position and then back to ● (ON). The engine will not restart until you perform this procedure.

## How to Stop the Engine

To stop the engine, shift into neutral, and turn the ignition switch to the OFF position.