


Cleaning


RIGHT SIDE

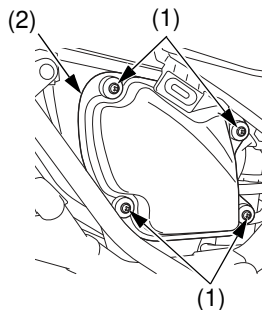

- (1) screws
- (2) air cleaner housing cover

1. Remove the right side cover (page 53).
2. Remove the screws (1) and air cleaner housing cover (2).

RIGHT SIDE

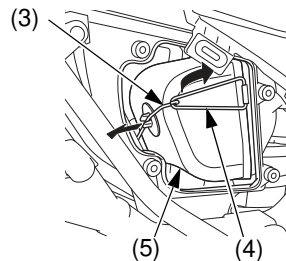

- (3) set spring
- (4) set spring holder
- (5) air cleaner

3. Unhook the set spring (3), take care to avoid bending the set spring and set spring holder (4).
4. Remove the air cleaner (5).

(cont'd)