

- 5 Press the **SEL** button until the desired minute is displayed.
- ▶ Press and hold the **SEL** button to advance the minute fast.




- 6 Press the **SET** button. The clock is set, and then the display moves to the backlight brightness adjustment.

2 Backlight brightness adjustment:

You can adjust the brightness to one of five levels.

- 1 Press **SEL** button. The brightness is switched.

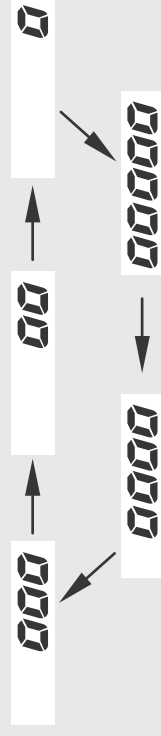

- 2 Press **SET** button. The backlight is set, and then the display moves to the changing the fuel mileage meter unit.