

Instruments (Continued)

- 1 To change the setting mode B, turn the ignition switch to the **I** (On) position while pressing **SEL** button until the display check is finished. The blinking of bar segment in the tachometer shows the currently applied REV indicator lighting RPM, and the numerical tachometer display shows it.
 - ▶ Tachometer bar segment is displayed as conventional display, regardless of set up display method.

- 2 Each time **SEL** button is pressed, the lighting RPM set value increase by 250 r/min (rpm) (one segment). When the set value exceeds the allowable range, the RPM set value automatically returns to 4,000 r/min (rpm).
 - ▶ Press and hold the **SEL** button to advance the REV indicator lighting setting value fast.

Available Setting Range

4,000 r/min (rpm) -to- 10,500 r/min (rpm)