

## Instruments (Continued)

Ex When REV indicator lighting RPM is setting 8,000 r/min (rpm) and REV indicator lighting interval RPM is 250 r/min (rpm).

REV indicator	r/min (rpm)
Blinking (2 times/second)	7,250 r/min (rpm)
Blinking (5 times/second)	7,500 r/min (rpm)
Blinking (10 times/second)	7,750 r/min (rpm)
Lighting	8,000 r/min (rpm)


If the REV indicator lighting interval RPM is 0, the REV indicator starts to lighting when reaching to the REV indicator lighting RPM.

- 5 Press **SET** button. The REV indicator lighting interval RPM is set, and then the display moves to the brightness adjustment of the REV indicator.

The REV indicator switches from blinking to lighting.

- 6 Press **SEL** button. The brightness is switched.

▲ You can adjust the brightness to one of five levels.

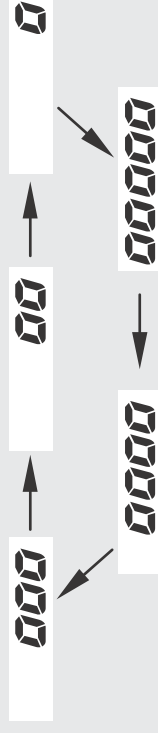

- 7 Press **SET** button. The brightness of the REV indicator is set, and then the display moves to the display setting of the tachometer.