


## Battery

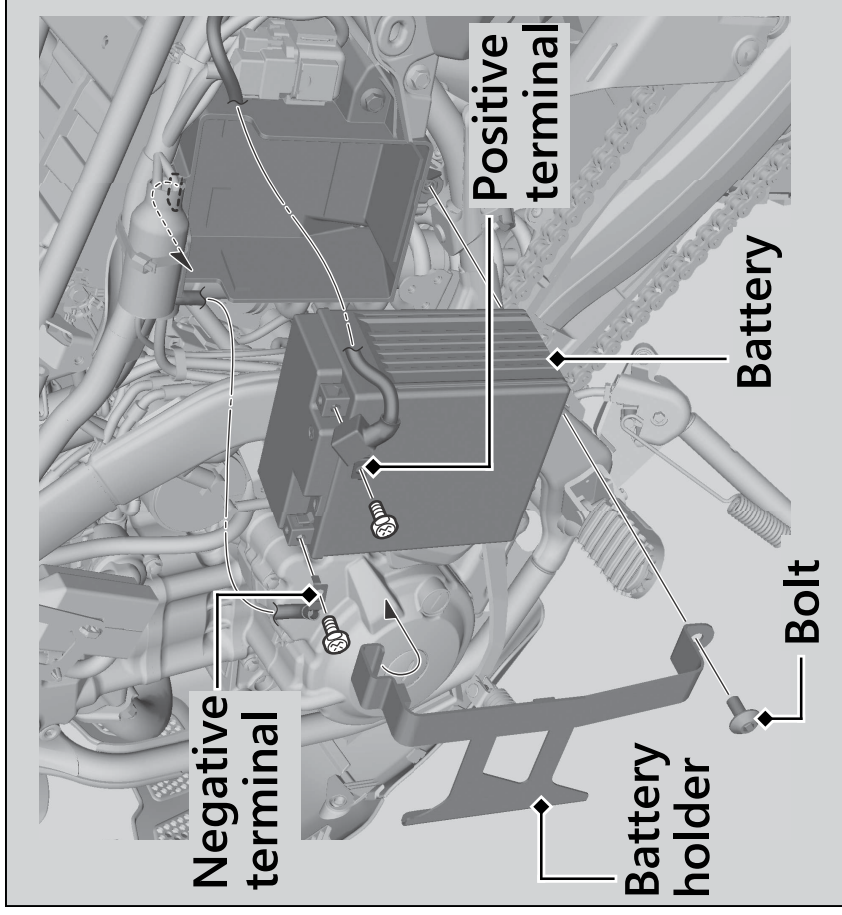

2. Remove the bolt and the battery holder.
3. Disconnect the negative  $\ominus$  terminal from the battery.
4. Disconnect the positive  $\oplus$  terminal from the battery.
5. Remove the battery taking care not to drop the terminal nuts.

## Installation

Install the parts in the reverse order of removal. Always connect the positive  $\oplus$  terminal first. Make sure that bolts and nuts are tight.

Make sure the clock information is correct after the battery is reconnected. ➔ P. 30  
For proper handling of the battery, see "Maintenance Fundamentals." ➔ P. 60  
"Battery Goes Dead." ➔ P. 97

## Removal

Make sure the ignition switch is in the **O** (Off) position.

1. Remove the left shroud. ➔ P. 73