


Seat

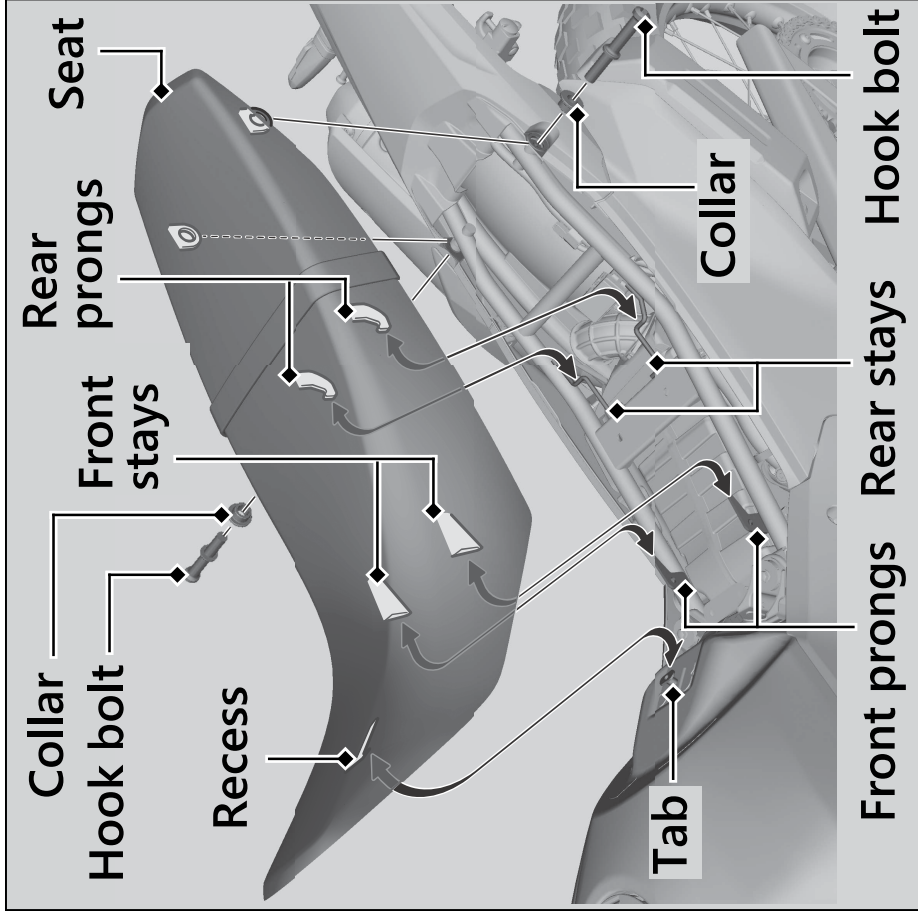

Removal

1. Remove the hook bolts and collars.
2. Pull the seat back and up.

Installation

1. Align the recess with the tab and insert the prongs into the stays and attach the seat as shown.
2. Install the collars onto the hook bolts. Tighten the hook bolts.

Torque: 21 N·m (2.1 kgf·m, 15 lbf·ft)