


## Position Light Bulb

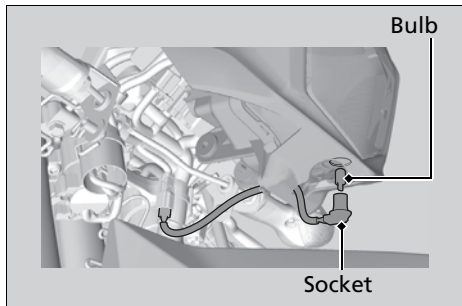

1. Remove the headlight assembly. ► P. 89
2. Pull off the socket without turning.
3. Pull out the bulb without turning.
4. Install a new bulb and parts in the reverse order of removal.

## Brake/Tail Light Bulb

1. Remove the bolts A.
2. Remove the number plate bracket.
3. Remove the bolt B, collar A, bolts C and collars B.

