


## ■ Main Fuse

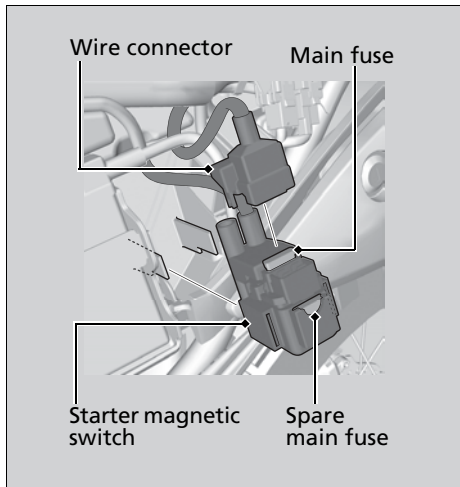

1. Remove the left side cover. ► P. 54
2. Disconnect the wire connector of the starter magnetic switch.
3. Pull the main fuse out with the fuse puller in the tool kit and check for a blown fuse. Always replace a blown fuse with a spare of the same rating.  
► Spare main fuse is provided on the starter magnetic switch.
4. Install the left side cover.

### NOTICE

If a fuse fails repeatedly, you likely have an electrical problem. Have your motorcycle inspected by your dealer.