


## Mode Indicator

---

The mode indicator (1) is located in the engine mode select button (2). It should light for a few seconds and then go off when the engine is started.

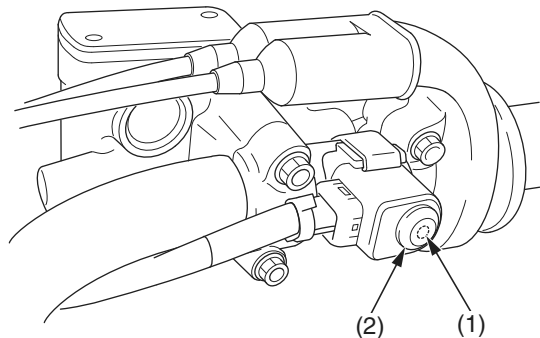

- (1) mode indicator
- (2) engine mode select button

The mode indicator indicates a selected mode when you operate the engine mode select button (page 134).

If the mode indicator stays on or does not come on when it should, have your dealer check it for problems.