


# Seat

Refer to *Important Safety Precautions* on page 23.

## Removal


1. Remove the seat mounting bolts (1).
2. Remove the seat (2) by sliding it backward.

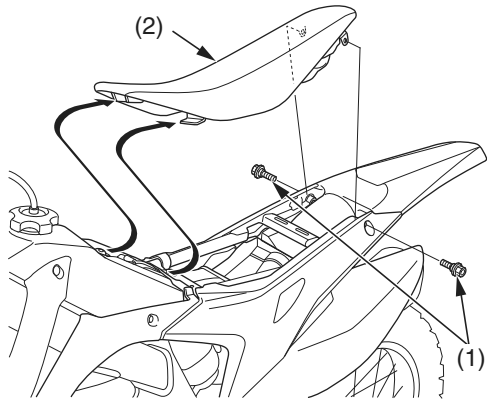

(1) seat mounting bolts (2) seat

## Installation

1. Install the seat while aligning the seat front slit (1) with the front seat bracket (2) and seat prong (3) with the seat stopper plate (4).
2. Install and tighten the seat mounting bolts (5) to the specified torque:  
19 lbf·ft (26 N·m, 2.7 kgf·m)

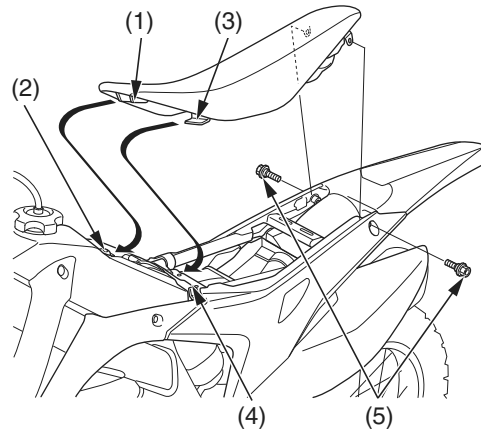

(1) seat front slit (2) front seat bracket  
(3) seat prong (4) seat stopper plate  
(5) seat mounting bolts